



User Manual

GUIDANCE FOR USE OF YOUR 'MODULAX' RECLINER

Your Modulax recliner is built to last, using the finest materials available on the market. That said, there are a number of points that must be followed to ensure your new purchase lasts for as long as possible. Some of these might seem obvious but we don't like to leave anything to chance when it comes to our products. Further to this, we cannot accept claims if the directions of use and maintenance are not followed.



Setup

How to open/unpack?

At all times when moving the recliner, make sure to take your time and be very careful. It is best to do this with at least 2 people.

01

Starting with the box in its upright position, carefully lay the box onto its side.



02

Open the bottom of the box so the flaps are facing outwards.



03

Push the recliner back to its original upright position.



04

Lift the box up and put aside. Then remove the plastic wrapped around the recliner, as well as the cardboard protection on the feet.



05

Unpack the charger and cables.



06

Connect the end of the cable to the charging point on the back of your recliner, and plug the other end of the cable into a socket **



** Please note: do not remove or change the position of the wiring underneath the recliner. This is assembled in a specific way that should not be altered.*

*** If your recliner contains a chargeable battery, remember to remove the cable once it is fully charged.*

Where to place your recliner?

- Your recliner is made for indoor use only; make sure it is set up in a suitable location inside your home.
- Ensure the room you choose has a normal level of humidity. A room that is too dry or too humid can be detrimental to the integrity of the material.
- Ensure the recliner is not exposed to direct sunlight or placed too close to a heat source (e.g. a radiator or heater). Direct sunlight can cause discolouration in the leather or fabric.
- Ensure there is enough space for the recliner to be fully extended in all directions, bearing in mind the swivel function.
- Ensure the recliner is placed close enough to a power source so the cable is not pulling. Also make sure it is in a place where there is no danger of someone tripping over the cable when plugged in.


General Usage



•Do not sit down heavily in the recliner.



•Do not sit on the armrests.

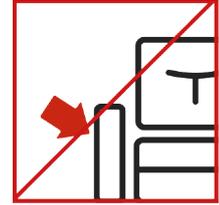

•Do not pull on the armrests to assist you in getting in or out of the recliner.



•Do not rest your full weight on the footrest when it is in the extended position.



•Do not allow children of 14 years or younger to use the recliner unless supervised by an adult.



•Do not push or pull the recliner across the floor. If you wish to move the recliner, it must be carefully lifted by 2 or more persons.

Charging

(for recliners with chargeable battery only)

- It takes approximately 8 hours to fully charge the battery from empty.
- **PLEASE NOTE**  **ONCE YOUR RECLINER IS FULLY CHARGED, YOU MUST TAKE OUT THE CABLE! DO NOT LEAVE THE RECLINER PERMANENTLY CHARGING!**

Power Lift Mechanism

All 3-motor Modulax recliners are also available with a power lift mechanism! This raises the whole chair to help you stand up with minimum stress to your body.


Please note:

1. When the lift function is activated, the turning base will automatically stop rotating for your safety.
2. The usual 3rd motor function with 'heart balance position' is replaced by the lift function. It is not possible to have both in the same recliner.

Maintenance

Moving parts always need to be well lubricated to help them move smoothly and function correctly. It is possible that during transportation the lubricant applied can get slightly dried out. Before using your recliner for the first time we therefore recommend to apply a lubricant to the footrest. This is something that is good to do for your recliner approximately once every six months.

Please see below for the areas of application:

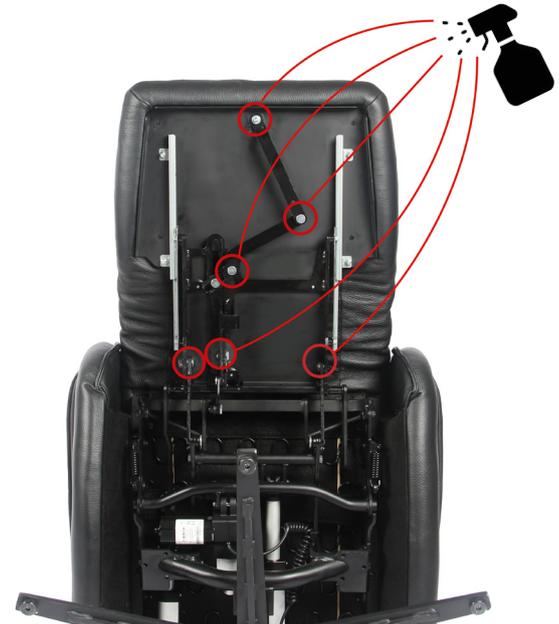

Leather

Leather is a wonderful, natural material that is extremely long lasting, as long as it is cared for in the correct manner. There are a few points that it is important to remember when it comes to your leather recliner:

- Since leather is a natural material, it is normal for it to stretch slightly after a while.
- It can happen that leather bears scars from insect bites, scratches, small wrinkles in the skin or other natural marks. These small aesthetic defects do not affect the quality of the leather. This is also part of what gives leather a specific and unique character when compared to synthetic materials.
- The original density/firmness of the foam can also decrease with time.

Cleaning Guidance:

Leather can be damaged slowly over time by exposure to all the usual substances that one might expect in the home: humidity, perspiration, tobacco smoke, bacteria and other sources of dirt. Fortunately, it is quite low-maintenance so make sure to follow the guidance given here to protect your recliner.

It is important to give your recliner a regular light clean, ideally once a week. This can be as simple as a light dusting to remove dirt, followed by a wipe down with a damp, microfiber cloth (only use distilled water, or boiled water that has cooled to room temperature). Leave to air dry or dry with a clean towel.

It is then important to carry out a more thorough cleaning of the recliner at least once every 3-6 months. We strongly advise to keep it simple when choosing your cleaning materials and avoid using any DIY creations that you might read about online or elsewhere. (Please note: If you wish to use a specific leather-cleaning product, we suggest you ask your retailer for guidance on which products they recommend).

We recommend the following steps for a complete clean:

1. Remove dirt with a microfiber cloth, or use a vacuum cleaner with a soft brush/upholstery attachment.
2. Create a cleaning solution using a few drops of a PH-neutral, non-detergent liquid soap, and mix this with distilled water. Dampen a clean microfiber cloth with this solution and lightly wipe down the recliner, from top to bottom.
3. Dampen another microfiber cloth with distilled water only and wipe down the recliner again.
4. Finally, lightly dry the recliner with a clean towel.

We also recommend using a good leather conditioner every 6 to 12 months. This will help keep the leather soft and supple. Ask your retailer for recommendations on suitable products.

Any new product you wish to use for cleaning your leather recliner, we suggest you test a small amount first in an inconspicuous place, e.g. somewhere on the back, just to see how the leather reacts and ensure there are no adverse effects.

For spills and stains:

To minimise damage done by any spills, it is best to clean as soon as possible. The longer you wait, the more likely it will be to leave a permanent stain.



Water-based spills

e.g. soda, tea, juice: quickly wipe off the spill with a clean, white cloth lightly dampened in distilled water, and then leave it to air-dry (never use a hair dryer or similar to dry the product after cleaning).



Oil-based spills

dab the stain with a dry, white, microfiber cloth.
Do not use water.

If you find a stain cannot be removed, try to clean it with the mix of PH-neutral, non-detergent liquid soap and distilled water, as described above.

In general, if you're not sure how to clean your leather recliner, or you have a particularly difficult stain, contact a leather cleaning professional or your retailer for advice.

Fabric

All of our fabrics are carefully selected not only for their design and touch but also their durability. There are a few points that is important to remember when it comes to your fabric recliner:

- Certain objects and materials, for example wristwatches, jeans or anything with a rough surface, can cause damage to the fabric upholstery.
- The elasticity of the seat may decrease slightly with time, depending on the intensity of use.
- The original density/firmness of the foam can also decrease with time.

To care for your fabric recliner we recommend a regular cleaning every 3-6 months, taking the following steps:

1. Remove dirt with a microfiber cloth, or use a vacuum cleaner with a soft brush/upholstery attachment.
2. Create a cleaning solution using a few drops of a PH-neutral, non-detergent liquid soap, and mix this with distilled water. Dampen a clean microfiber cloth with this solution and lightly wipe down the recliner, from top to bottom.
3. Dampen another microfiber cloth with distilled water only and wipe down the recliner again.
4. Finally, lightly leave the recliner to air dry or dry with a clean towel.

For spills and stains:

*To minimise damage done by any spills, it is best to clean as soon as possible. The longer you wait, the more likely it will be to leave a permanent stain.



Water-based spills

e.g. soda, tea, juice: quickly wipe off the spill with a clean, white cloth lightly dampened in distilled water, and then leave it to air-dry (never use a hair dryer or similar to dry the product after cleaning).



Oil-based spills

dab the stain with a dry, white, microfiber cloth. Do not use water.


If you find a stain cannot be removed, try to clean it with the mix of PH-neutral, non-detergent liquid soap and distilled water, as described above.

In general, if you're not sure how to clean your fabric recliner, or you have a particularly difficult stain, contact a cleaning professional or your retailer for advice.

** The guidance provided in this instruction manual is to be used at your own discretion and no claim may be made based on the information provided. All content is subject to change.*


MODULAX RECLINERS BUTTON FUNCTIONS GUIDE

(Please refer to the guide relevant to your recliner)

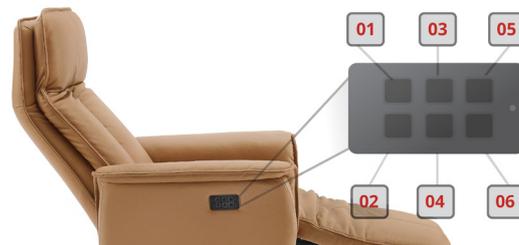

Remote Type A Button Functions

01	Recline the backrest	
02	Return backrest to upright position	
03	a) In starting position, raise the seat height by 8 degrees. b) In a relaxed position, incline an extra 8 degrees.	
04	Reverse the function of button 3, returning seat to original position	
05	Raise the footrest	
06	Lower the footrest	

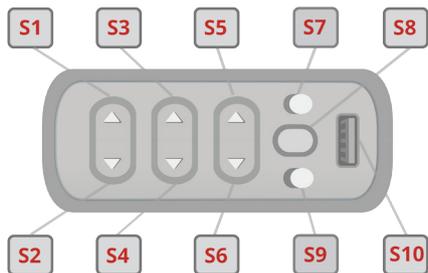

Remote Type B Functions

- S1** Recline the backrest
- S2** Return backrest to upright position
- S3** a) In starting position, raise the seat height by 8 degrees.
b) In a relaxed position, incline an extra 8 degrees.
- S4** Reverse the function of button 3, returning seat to original position
- S5** Recline the backrest
- S6** Raise the footrest
- S7** Press and hold to return all functions to the original upright position

S8 Memory Function 1
This button allows you to save your favourite position for the recliner functions.

Step 1: Starting from the original upright position, use buttons S1-S6 to reach the position that you would like to save. For example, you may want to have the footrest completely raised and the backrest halfway reclined.

Step 2: Once you have reached your desired position, press S8 and hold it for 3-5 seconds. You should hear a small "beep" sound, this means that your position is saved.


Now, any time that you press S8 (just press, don't hold), the recliner will automatically go to your saved position

S9 Memory Function 2
This works exactly the same as S8, so you can use S9 to save a second position. Follow the instructions as above to save your second position

S10 USB charging point

Warning!

***For safety purposes, be careful when using the memory button that the area around the recliner is clear of any possible obstructions. ***

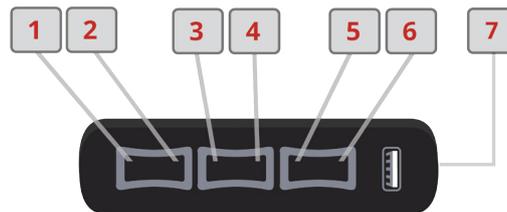

Remote Type C Functions

- 01** Recline the backrest
- 02** Return backrest to upright position



- 03** a) In starting position, raise the seat height by 8 degrees.
b) In a relaxed position, incline an extra 8 degrees.
- 04** Reverse the function of button 3, returning seat to original position




- 05** Raise the footrest
- 06** Lower the footrest



- 07** USB charging point



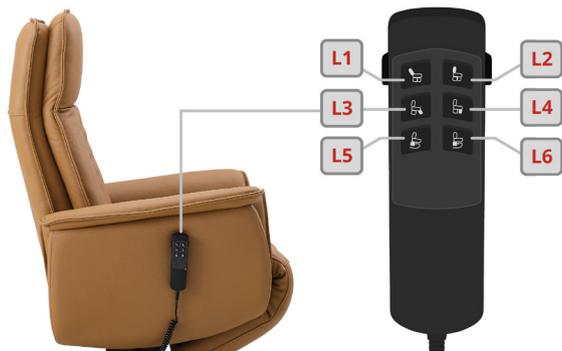

Lift Remote Functions

- L1** Recline the backrest
- L2** Return backrest to upright position



- L3** Raise the footrest
- L4** Lower the footrest



- L5** Lift the recliner
(power lift function)
- L6** Return recliner to starting position



Please note: recliner will automatically stop rotating when in power lift mode. Only when recliner is completely back in the starting position will it be possible to rotate.